

# SmartPhone Alarm Pod

**Mains or battery powered remote controlled alarm unit for use with SmartPhones or MP3 players**

## Contents

SmartPhone Alarm Pod  
Power Supply

## Installation

If the alarm is mains powered you must first connect the power supply to the underside of the Pod.

The Pod should be secured using the adhesive pad located on the base.

Firstly clean the surface where the Pod is being placed. Remove the backing from the adhesive pad and press it down firmly onto the surface.

The Pod features an anti-tamper switch which will activate the alarm if your Pod is removed.

To secure a SmartPhone or MP3 to the Pod, remove the backing from the adhesive pad on the sensor and secure this to the back of the SmartPhone or MP3. If the optional charging cable is not being used please ensure the terminator is connected.

## Instructions

### **Mains Powered**

Once mains supply is connected to the Pod, the LED on the sensor will be continuously lit showing power to the sensor.

When using a charging lead, first remove the terminator from the bottom edge of the sensor and connect the compatible lead for the device. The SmartPhone or MP3 is now being charged even though the alarm is turned off.

Turn the alarm on by holding the remote control 1cm from the infrared receiver on the right hand side of the alarm and pressing the button. The alarm will give one long beep and the green LED on the pod will be lit continuously indicating it is on. The alarm is now armed.

If the SmartPhone or MP3 is removed the alarm will sound and the red LED will flash. Turn the alarm off by holding the remote control 1cm from the alarm's infrared receiver and pressing the button. The alarm will beep 3 times and it is now turned off. This will then allow you to investigate and resolve the issue. Reset the alarm as above.



Unit 5 Fullwood Close, Aldermans Green Industrial Estate, Coventry CV2 2SS  
Tel: 024 76603535 Fax: 024 76603636  
Website: [www.myriadtec.com](http://www.myriadtec.com)

If the Pod is lifted from its fixed surface, the anti-tamper switch will activate the alarm and the green LED will flash. Turn the alarm off as above and rectify the issue. Reset the alarm as above.

### **Battery Powered**

Turn the alarm on by holding the remote control 1cm from the infrared receiver on the right hand side of the alarm and pressing the button. The alarm will give one long beep and the green LED will light up once and flash every 10 seconds. The alarm is now armed.

If the SmartPhone or MP3 is removed the alarm will sound and the red LED will flash. Turn the alarm off by holding the remote control 1cm from the alarm's infrared receiver and pressing the button. The alarm will beep 3 times and it is now turned off. This will then allow you to investigate the cause and resolve the issue. Reset the alarm as above.

If the Pod is lifted from its fixed surface, the anti-tamper switch will activate the alarm and the green LED will flash. Turn the alarm off as above and rectify the issue. Reset the alarm as above.

If the battery is low, the red LED on the base will flash and the alarm will beep indicating the battery needs to be replaced immediately. Ensure the alarm is turned off when changing the battery.

To replace the battery (3.6V/ER14250), remove the cover from the base by pressing a flat screwdriver into the front slot and lifting the cover at the same time. While holding the cover, press the screwdriver into the rear slot and lift the cover upwards. The battery is located on the left hand side. When the battery has been replaced, place the cover back into its original position and then reset the alarm as above.



Unit 5 Fullwood Close, Aldermans Green Industrial Estate, Coventry CV2 2SS

Tel: 024 76603535 Fax: 024 76603636

Website: [www.myriadtec.com](http://www.myriadtec.com)