

SYGMA 2

Installation and Operational Instructions

To Install

Fix the alarm and the tracks in the required positions, to give good access to the products to be protected. Fit an interconnecting lead, from the right hand black socket on the alarm, to the first track. From the opposite end of the first track connect to the next track. Continue connecting the tracks end to end. On the final track fit the terminator into the end socket.

To Set Up

Connect the mains adaptor to the left hand black socket on the alarm. Plug in the adaptor to the mains, the unit will power-up automatically and will be active. The bottom left LED will be red to show that the mains are connected and the window will show a rotating bar. The system is now operational.

The alarm has two codes, one is for normal use to mute any alarm condition and is called the user code. The other code allows either code to be changed, and the use of merchandising and shut down modes. This is called the Manager's code. Both codes are four digits long and when input must be followed by #.

User Code

The User has two options:

1. Input the User code followed by #. This will enter mute mode, show the number of alarms and mute the alarm.
2. Press #. This will reset the tracks. (Only available during mute mode).

In operation following an activation, the alarm affected will show a flashing "A" in the window. Mute the alarm using the code followed by #. The display will now show a flashing number. This tells you the number of alarm conditions on the system. Locate the cause of the alarms which are indicated by the Track LEDs, correct the problem (you have 2 minutes to do this) return to the alarm and press #, this will reset the tracks and return the alarm to the normal rotating bar display. If you do not return to the alarm within 2 minutes the alarm will sound again to remind you, and you will need to mute it again.



Unit 5 Fullwood Close, Aldermans Green Industrial Estate, Coventry CV2 2SS

Tel: 024 76603535 Fax: 024 76603636

Website: www.myriadtec.com



Managers Options

The manager has four choices after entering his code followed by # and then *, these are:

Option 1 Change Manager's code

Enter code followed by # and then*

Press 1, a number 1 will light up in the window to indicate that you are in option 1. Input the new code followed by #, the display will revert to a rotating bar. You have now changed the manager's code.

Option 2 Change User code

Enter code followed by # and then*

Press 2, a number 2 will light up in the window to indicate that you are **in option 2**. **Input the new code followed by #, the display will revert** to a rotating bar. You have now changed the user code.

Option 3 Merchandising Mode

Enter code followed by # and then*

Press 3, a number 3 will light up in the window to indicate that you are in option 3. The alarm will now beep every 3 seconds. In this mode the alarm is muted and the tracks are sent a reset signal on every beep. This allows accessories to be removed or added to the tracks without the alarm sounding, and the integrity of the accessories to be confirmed by the track LED going out. This mode also allows the tracks to be disconnected and rearranged. If the tracks are disconnected when in this mode, the alarm will sound. It will however, mute and reset when they are reconnected. To exit this mode press #.

Option 4 Shut down

Press 4, the mains light on the LED will change from red to green. If the power is now removed the unit will not work. It will power up automatically as soon as the power is restored. This mode is used just before the store is closed at night. If the store's main power switch is turned off before leaving at close of business, the alarm unit will not alarm during the night but will come back on automatically as soon as the power is restored in the morning.



Unit 5 Fullwood Close, Aldermans Green Industrial Estate, Coventry CV2 2SS

Tel: 024 76603535 Fax: 024 76603636

Website: www.myriadtec.com

